




Zumio is unlike any other toy.

## User Guide


www.myzumio.com

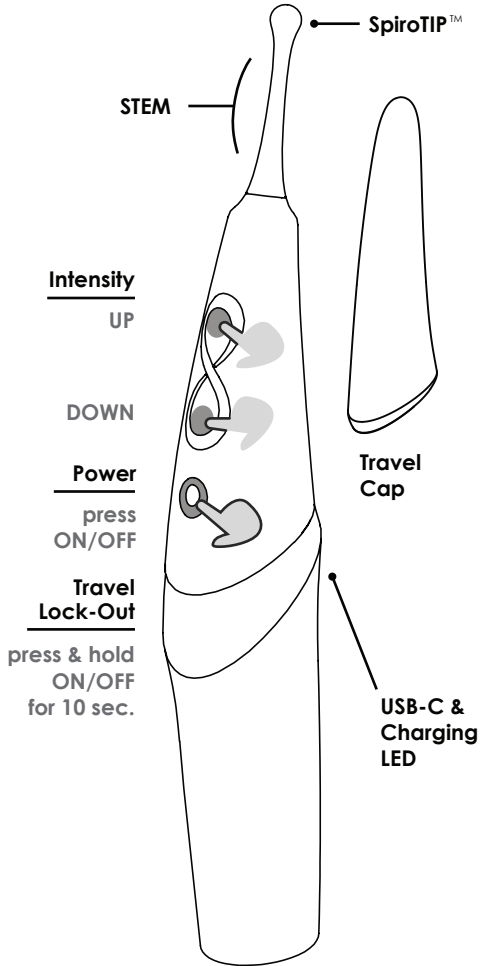

CLI-20307-01


## Try the Zumio Exploration Experience!

For tips on how to use Zumio, go to...  
www.myzumio.com/pages/how-to-use

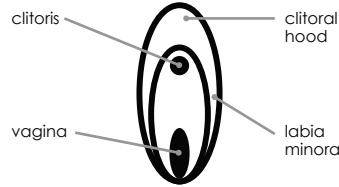


### STEP 1 20 seconds

Lubricate TIP. Build excitement using the TIP on lowest intensity.

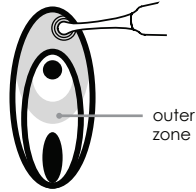


### STEP 2 60 seconds

Increase pleasure and intensity using the TIP and STEM.

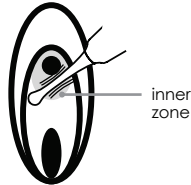


### STEP 3



Use the TIP and STEM together, near the clitoris

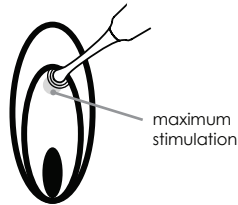

### Explore

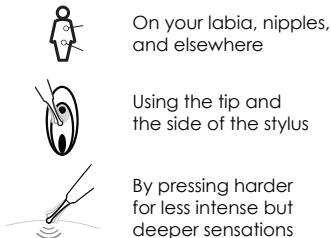


## How to Zumio!

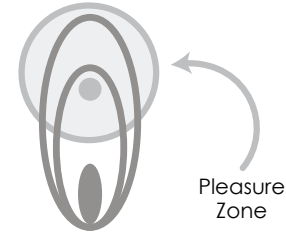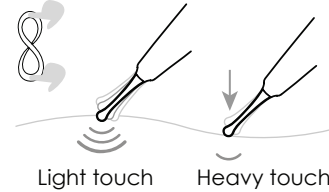


Explore the external area of the vagina; a stronger sensation will be felt the closer the product tip or stem is to the clitoris.


### On/Off

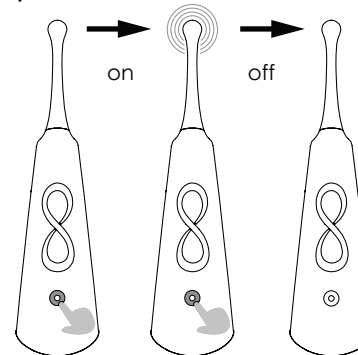


### Intensity

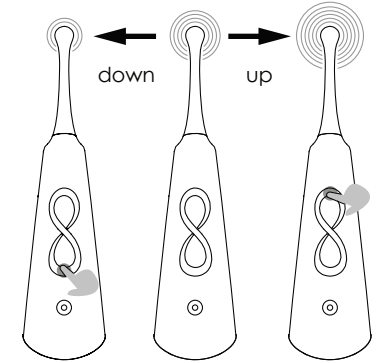

### Preventing Accidental Activation

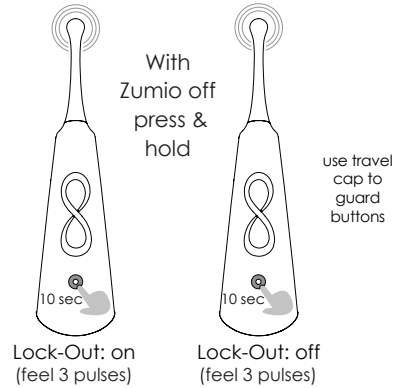

### Charging

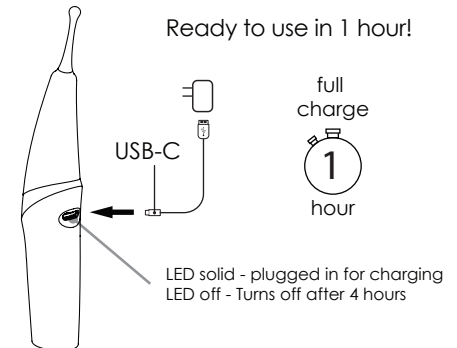

## Care Instructions

- Charge prior to first use.
- When the product is plugged in for charging, the LED indicator will be solid. Zumio is charged after 1 hour. LED will turn off after 4 hours.
- If the LED is blinking, charging is not working correctly. Try a new USB cable and power adapter.
- Use only with water-based lubricants. Do not use silicone-based lubricants.
- Clean after each use with water, mild soap and non-abrasive cloth.
- **Charging:** Use only with the USB cable provided and connect to USB power adapters certified in compliance with IEC 60950-1 or IEC 60601-1 based national standards.

## Warnings

- This device is intended for external use only. It is not intended for vaginal, urethra, or rectal insertion.
- Inspect device for damage prior to each use and prior to charging. Do not attempt to use a damaged device.
- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities.
- Keep the USB charging cable away from children as it poses a strangulation risk.
- Do not modify disassemble or attempt to repair any part of this product.
- Stop using if use of product causes numbing, discomfort, pain or adversely affects other medical issues.

## Limited Warranty

This Limited Warranty covers any defects in material or workmanship during the Warranty Period of 2 years after the date of manufacture, see code mark on product.

This Limited Warranty applies only to physical goods purchased directly from Zumio Inc.

During the Warranty Period, Zumio Inc. will replace products that prove defective because of improper material or workmanship. The replacement product assumes the remaining warranty of the original product for 2 years from the date of original product manufacture.

Due to the personal nature of the product, Zumio Inc. does not provide any satisfaction guarantee nor are there any medical claims implied or warranted by the use of this product.

This Limited Warranty does not cover any problem that is caused by conditions, malfunctions or damage not resulting from defects in material or workmanship.

This product does not use lithium battery technology. Nickel-metal hydride batteries were chosen as a safer and more robust alternative.

To obtain warranty service, you must first contact Zumio Inc. to determine the problem and most appropriate solution for you.

### For customer service visit:

[www.myzumio.com](http://www.myzumio.com)  
[customers@myzumio.com](mailto:customers@myzumio.com)  
[www.myzumio.com/FAQ](http://www.myzumio.com/FAQ)

Follow Zumio: @myzumioinc, #zumio



## Specifications

**Model:** Z2

**Main Power:** Nickel-Metal Hydride (NiMH) chargeable battery, 350 mAh capacity

**Charging Method:** USB-C

**Electrical Class:** Internally Powered

**Operational Frequencies:** 18 to 110 rev/sec

**Tip Revolution Amplitude:** 0.08in (2.0 mm)

**Power Requirement:** USB Input Power 5VDC, 350mA

**Battery Charge Time:** 1 hour. LED turns off after 4 hrs.

**Usage Time from a Full Charge:** 2 hours – may vary depending upon usage patterns

**Waterproof:** yes, to IP67 - 1.7 feet (0.5 meter)

**Approximate Weight:**

Hand Held: 70 grams (0.15 lbs)

**Dimensions:**

Length 6.5 in (165 mm)

Maximum Diameter 1.24 in (31.6 cm)

**Safety Certifications:** FCC Part 15,

ISED ICES-003, CISPR 14-1, IEC/EN 55014-1,

CISPR 14-2/EN 55014-2, IEC/EN 60335-1, IEC/

EN 60335-2-32, EMF: IEC/EN 62233



Design, engineering, quality assurance in Canada.  
Manufactured by Zumio Inc. in China.



**Global patents:**

TM  
US87678606-CA1,015,972-EU17454737-CH26587123  
AU1886441-KO40-1410201-MX-1919880-JP6037476  
-IN2653441-RU663142-IS300012-CNT200896CNE1000WF



DP  
USD837993S1-CA171806-EU14551091-CN2020224939722



UP  
US15/577,890-CA3025137-PCT.IB2016.053151  
EU16802661.5-CH2016800-441976-AU2016272730  
KO7037872-MXg2017015248-JP6791953-IN2016184755  
RU2177111-IS255976-CN20202112047254



UM  
CN2020224939722

## Disposal Instructions

This product contains a battery that may contain hazardous substances that could impact health and the environment if not properly disposed of. In order to avoid the dissemination of those substances in our environment and to diminish the pressure on natural resources, we encourage you to use the appropriate take-back systems for product disposal.

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

